


# MIDDLETOWN POST

## BURIAL INSTALLATION INSTRUCTIONS

1. Dig a 24" (for 8' – 10' post) or 36" (over 10' post) hole x 12" wide.
2. Fill the hole with concrete leaving approximately 6" clearance for the gas access hole in the post.
3. Place your base over the concrete filled hole.
4. Carefully slide the aluminum post down through the base and into the concrete to just below the inlet supply hole in the bottom of the post.
5. If the reducing collar is not already installed in the post, slide the thin side of the reducing collar down inside the top of the post and secure with the (3) set screws at the top of the post.
6. For Gas: with the coiled end at the top, slide the gas feed line down through the post and out through the supply hole in the bottom of the post and connect it to the main gas supply.  
(have a partner hold the base up while you connect the line)  
For Electric: Feed the wires from the main through the inlet supply hole in the bottom of the post and up to the top of the post. (have a partner hold the base up while you connect the line)
7. Tighten the screws in the base section to secure it to the extruded aluminum post.
8. After you have secured the post and are satisfied with the alignment, let the concrete harden before attaching the lamp.
9. Follow the installation instructions packed with the lamp.

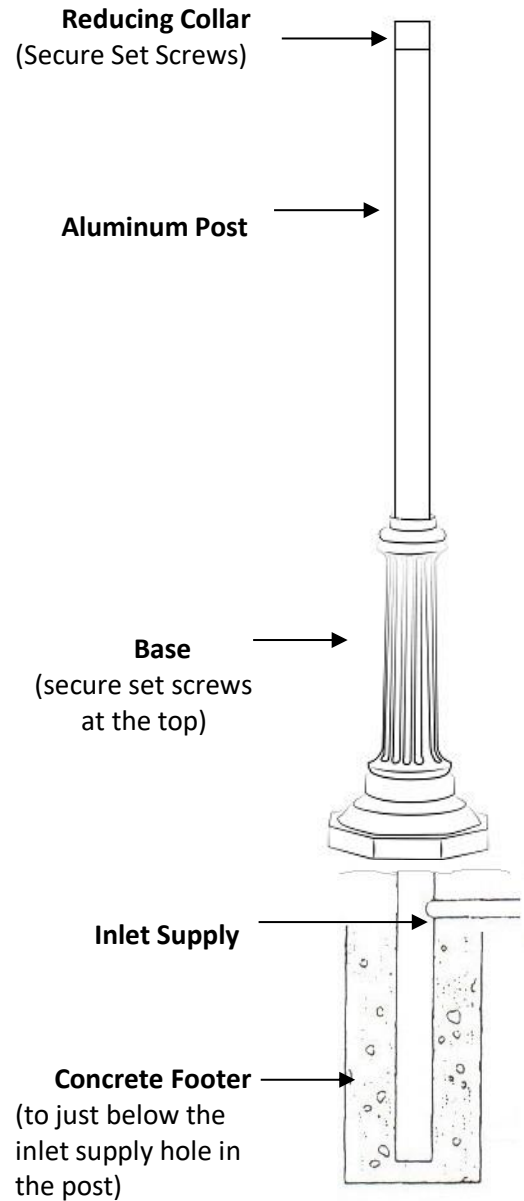

  
**AMERICAN  
GLOW LIGHTING**

[www.americanglowlighting.com](http://www.americanglowlighting.com)